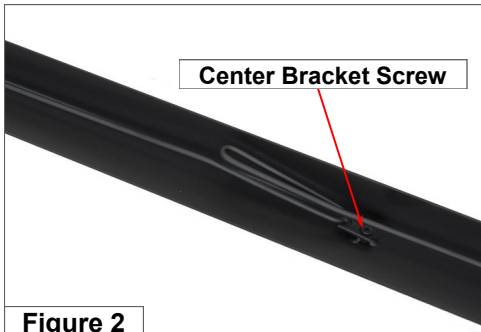
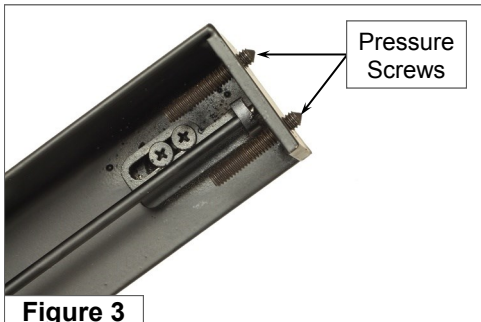
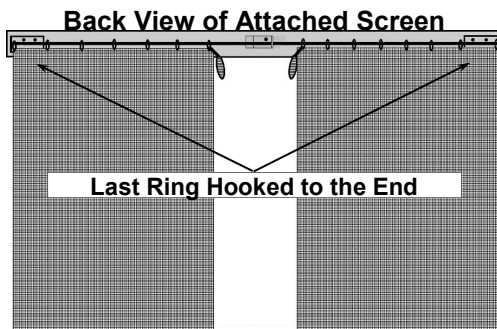

Figure 1

Figure 2

Figure 3

Figure 4

WARNING

This product can expose you to chemicals including Carbon Black, which is known to the State of California to cause cancer.

For more information go to www.P65Warnings.ca.gov

PARTS INCLUDED FOR INSTALLATION:

1 ea. Header Bar with Curtain Rod	4 ea. Pressure Screws
2 ea. Mesh Screen Curtains with Handles	1 ea. Allen Wrench

ASSEMBLY

- Unpack the Header Bar and Mesh Screen Panels.
- Remove the screw holding the center bracket of the curtain rod to the back of the Header bar. **(Figure 2)**
 - Slide the Mesh Curtain Rod to one side until the end of the rod clears the End Bracket and then out of the other End Bracket.
- Test fit the Header Bar to the Fireplace Opening.
- Unpack the screen panels and separate them.
 - Identify the top (with rings) and center (with handles).
 - Thread the Mesh Panel rings onto both sides of the Curtain Rod making sure that the handles are toward the center.

NOTE: To give the mesh curtain a pleated appearance twist each ring one-half turn before threading onto the rod.
 - Leave the last curtain ring on each Mesh Panel hanging loose.

NOTE: The installation sequence can be varied at this stage:

- **OPTION 1:** Reattach the Curtain Rod to the Header Bar and install the assembled screen to the fireplace.
- **OPTION 2:** Attach the Header Bar to the fireplace and then reattach the Curtain Rod and Mesh to the Header Bar.

The second method allows easier access to the hardware used to secure the Header Bar to the fireplace. The Header Bar is also lighter and easier to support during installation.

- Slide the Mesh Curtain Rod into each end bracket in turn.
 - Reinstall the screw in the center bracket of the curtain rod.
 - The end brackets can be adjusted if necessary.
 - Hang the last curtain ring on the hook on the end bracket.

INSTALLATION

- Thread two pressure screws into both Header Bar ends. **(Figure 3)**
 - The tips of the screws should barely project from the end of the Header Bar.
- Position the Header Bar tight against the fireplace lintel and flush with the face of the fireplace. Tighten all four of the pressure screws evenly.

Alternate Method: The Header Bar can be attached directly to the fireplace lintel through the holes provided in the Header Bar. Mark the position of the holes on the lintel, drill appropriate size holes in the lintel, and attach with self-tapping metal screws (not provided).
- Install the Mesh Curtain following the steps above if it isn't already attached to the Header Bar.
- Ensure that the Mesh Screen panels operate freely.